

CARBON REFLEX™ 1

Assembly Instructions




PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, stakes

1 PREPARE FOR SETUP


1. Spread tent out; stake out four corners tightly.

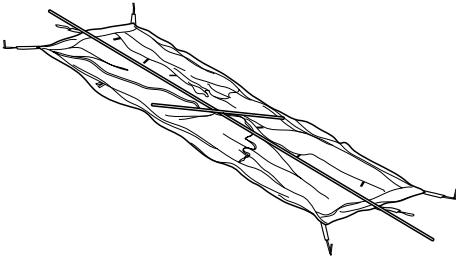

CARBON FIBER POLE CARE: For maximum longevity of carbon poles, avoid crushing them and prolonged exposure to abrasion. Always unfold poles carefully, ensuring each section is fully connected before assembling tent. With proper care, carbon fiber poles will last the life of your tent.

2 ASSEMBLE TENT FRAME

1. Insert tips of main pole into grommets at one end of tent floor then the other.
2. Insert short cross pole into two grommets at midpoint of tent ceiling.

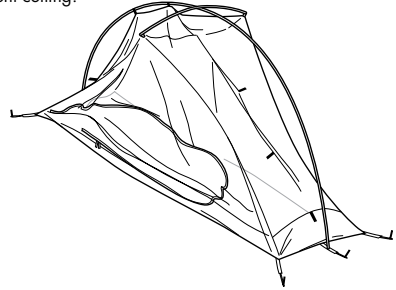


3 ATTACH CLIPS

1. Attach clips to pole along length of tent.



4 ATTACH RAINFLY

1. Lay rainfly over tent and attach midpoint rainfly grommets to short cross pole.
2. Pull out vestibule until taut and stake down.

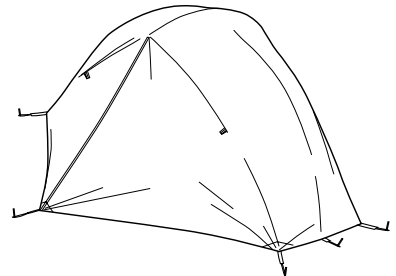

USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. For complete care and use instructions, refer to the Owner's Manual (available at www.msrgear.com/CarbonReflex1).



MOUNTAIN SAFETY RESEARCH®

© 2016 Cascade Designs, Inc.

4000 First Avenue South
Seattle, WA 98134 USA

1-800-531-9531 | 1-206-505-9500